



SUN DRAINAGE ADJUSTMENT SHIM INSTRUCTIONS

PRODUCT #HW701, HW702, HW703, HW704, HW705, HW706

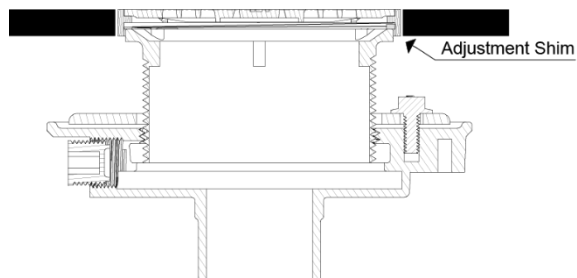

- (1) Remove the strainer (three screws) from the tilted drain.
- (2) Determine the low side of the drain and place the thick side of the adjustment shim on the low side.
- (3) Place strainer over the shim and check for level. Add or remove shims as needed until drain strainer is level with finish floor.
- (4) Align the strainer with the inserts in the fixture head and re-install screws.

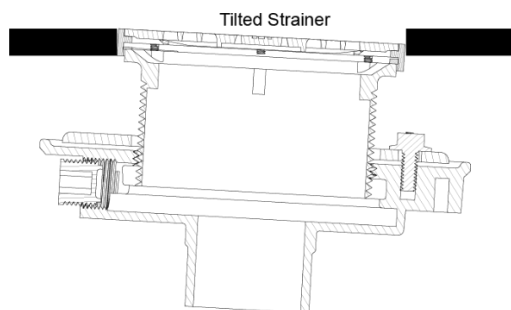

Use longer screw when needed when using multiple shims.

#XS700 SUN Drainage Adjustment Shim
Instruction Sheet Rev.A.10/2016

12600 Cardinal Meadow ▪ Sugar Land, TX 77478
www.sundrainage.com

